

DuraLabel[®] PRO

QuickStart Guide



Graphic Products, Inc.

1-800-788-5572

Local: 503-644-5572

www.DuraLabel.com

www.GraphicProducts.com

E-mail: info@GraphicProducts.com

**Read Me
First!**

****IMPORTANT****

For Upgrading from an existing DuraLabel driver installation!

Upgrade Drivers

In order to upgrade DuraLabel printer drivers the previous driver will need to be uninstalled. Please follow these steps:

1. Press the “**Uninstall Driver**” button on the installation screen.
2. Click “**Remove printer drivers**” and click “**Next.**”
3. Click “**Use advanced printer driver removal options**” and click “**Next.**”
4. Check all existing DuraLabel printers and click “**Next.**”
5. Check all existing DuraLabel drivers and click “**Next.**”
6. Check all existing DuraLabel components and click “**Next.**”
7. Check the files associated with the deleted items you wish to remove and click “**Next.**”
8. Check through the list provided and click “**Finish.**”
9. Click “**Restart.**”

The DuraLabel PRO printer driver may now be installed. Begin with page 7, Step 2 Connect Printer of the QuickStart Guide.

Minimum System Requirements

Operating System: *Windows 2000 SP4, Windows XP SP2 and Windows Vista*

Memory: *128 MB RAM*

Additional Requirements: *USB 1.1 or 2.0 and IT Administration Privileges*

INTRODUCTION

Congratulations on your new purchase of the DuraLabel[®] PRO! This guide is included to get you printing as soon as possible.

With this guide you will learn how to set up your printer, load supplies and print labels.

The ribbon and various print media for the DuraLabel[®] PRO have been optimized for compatibility and print quality. Only authorized supplies from Graphic Products will print correctly in the DuraLabel[®] PRO.

If you need more help with setting up your printer, please refer to the DuraLabel PRO[®] Manual (included on the installation CD), visit www.Duralabel.com or give us a call.

Graphic Products, Inc.
1-800-788-5572

Please contact us for all your labeling needs. From standardized to custom labels, we're ready to provide the labeling supplies you need. Call 1-800-788-5572 today to get your labeling problems solved.



CONTENTS

Contents of Package.....	pg. 3
1. Load Printer	pg. 4
Load Ribbon.....	pg. 4
Load Vinyl Tape.....	pg. 6
2. Connect Printer	pg. 7
3. Install Using USB Cable.....	pg. 7
4. Install Using Parallel Cable	pg. 8
5. Set Up to Print	pg. 9



DuraLabel® PRO
Thermal Transfer Printer



USB Cable



Label Supply Spindle
& 2 Fixing Tabs



AC Adapter



2 Ribbon Spindles,
(1 with an empty paper core)

Contents of Package:

- DuraLabel® PRO Thermal Transfer Printer
- DuraLabel® PRO Installation CD
- DuraLabel® PRO QuickStart Guide
- DuraLabel® PRO User's Guide
- AC Adapter
- USB Cable
- 2 Ribbon Spindles (*black spindles, one will have a paper core on it*)
- Label Supply Spindle
- 2 Fixing Tabs (*for each end of the Label Supply Spindle*)

If you are missing a part, please call your Graphic Products Representative

****IMPORTANT****

Always turn OFF the printer when loading supplies. Always wait at least 5 seconds before turning ON the power.

1. LOAD PRINTER

See the Load Printer section (pages 3-10) in the User's Guide for a more detailed explanation of supply loading.

The ribbon and various print media for the DuraLabel PRO have been optimized for compatibility and print quality. Only authorized supplies from Graphic Products will print correctly in the DuraLabel PRO.

For more information about supply loading, please view the supply loading video on the installation CD.

Load Ribbon


****IMPORTANT****

Always turn OFF the power first!

The following instructions are for loading 4.3" ribbon supply. See "To Load 2.5" Ribbon Supply" section (page 6) in the User's Guide for instructions on how to load 2.5" ribbon supply.


- 1. Open the Ribbon Mechanism Cover. (See Figure 1)**

Figure 1

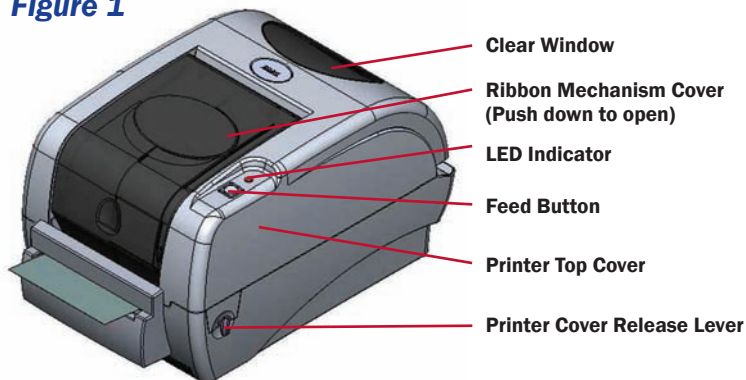


- Place Ribbon Supply onto the empty Ribbon Supply Spindle and insert the spindle into the Rear Hub.
 - Place the Ribbon Rewind Spindle, with the paper core, on the Front Hub.
- Note:** Make sure the flanges on the end of the ribbon spindles are on the right side of the printer when viewing from the front. (See Figure 2)

 Figure 2

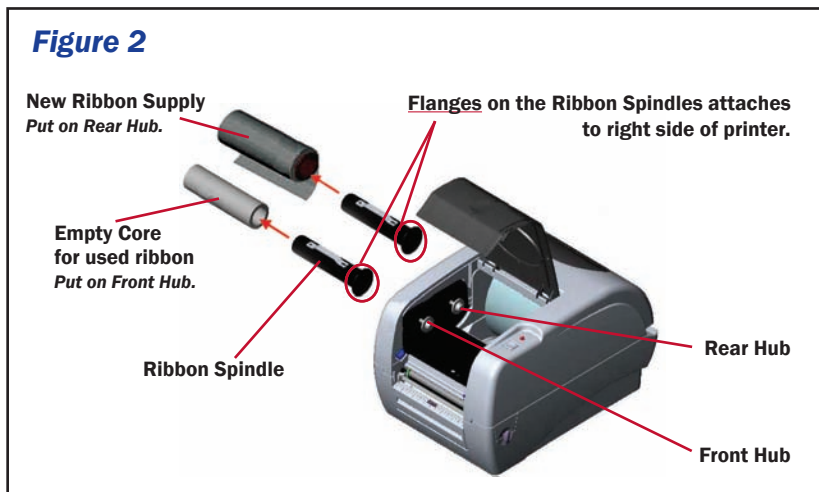

- Open the Printer Cover using the Printer Cover Release Levers. (See Figure 1, pg. 4)
- Thread the ribbon down and underneath the Ribbon Mechanism. **Note:** The dull side of the ribbon should face down (face the label stock). (See Figure 3)
- Tape the entire width of the end of the ribbon to the front empty core.
- Wind the ribbon onto the take-up core by rotating it with your thumb.

 
Figure 3

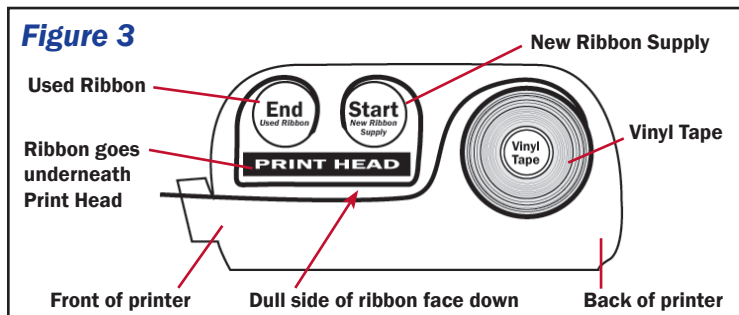


Load Vinyl Tape

****IMPORTANT**** Always turn OFF the power first!

1. With the Ribbon Mechanism still in upright position, center the Label Stock on the Label Supply Roll Spindle using the Fixing Tabs. (See Figure 4)

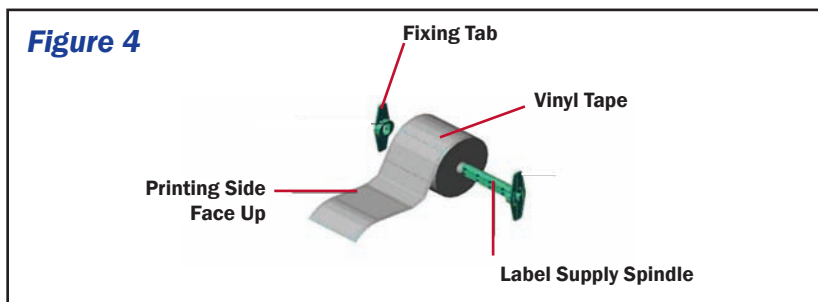

 2. Place the Label Supply Spindle with the Label Stock in the Label Roll Mount slots. (See Figure 5)
3. Guide the Label Stock underneath the white Teflon Bar.
4. Secure the Label Stock in place by moving the Adjustable Label Guides to hold the Label Stock in the center.
5. Thread the Label Stock through the Printed Label Opening, leaving about 1/2" Label Stock hanging out the opening.

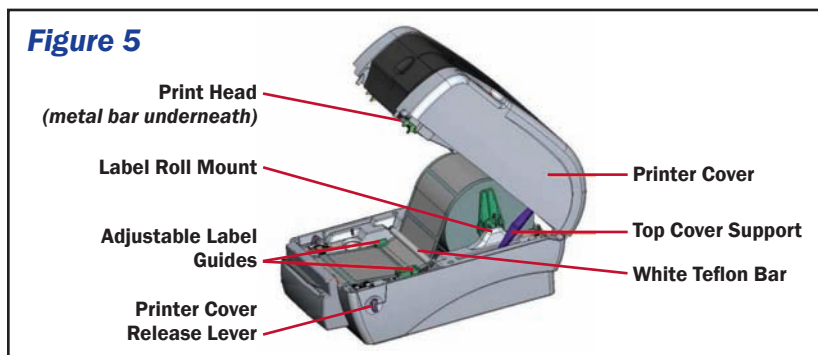

6. Close Printer Cover by lifting it all the way up, then gently press down until it latches closed.
7. Close the Ribbon Mechanism Cover by pressing down until it latches.


2. CONNECT PRINTER

****IMPORTANT****

These Steps need to be done in the order below!

1. Connect the **power supply**.
2. Connect the DuraLabel PRO to your PC using the **USB or parallel cable**.
3. **Turn on the** DuraLabel PRO. (Switch is in back of printer, See Figure 6)

 Figure 6

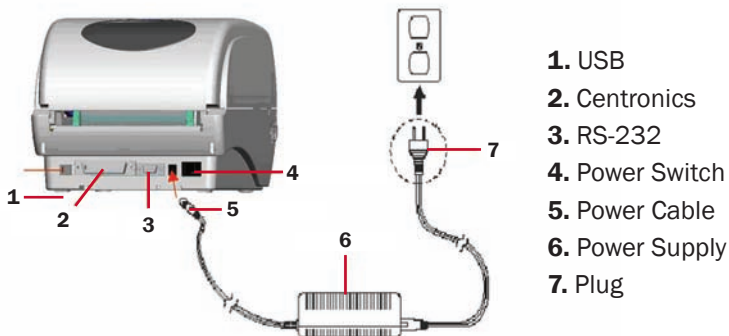

3. INSTALL USING USB CABLE

****IMPORTANT****

You must have administrative rights in order to perform this installation.

1. A “Found New Hardware” dialog box may appear. If so, select “**No, at this time.**”
2. Insert DuraLabel PRO Installation CD into the CD-ROM drive.
3. Select “**Install the software automatically**” and click “**Next.**”
(Step 3 of “Install Using USB Cable” may run automatically.)
4. When prompted to continue, click “**Continue Anyway.**”
5. A dialog will appear showing the installation progress and will close after completion.
6. A Found New Hardware dialog box will appear, click “**Finish**” to exit and to close the window.
7. Skip to page 9, Step “5. Set up to Print.”

4. INSTALL USING PARALLEL CABLE

Skip this Step if using a USB Cable!

****IMPORTANT****

You must have administrative rights in order to perform this installation.

1. Insert DuraLabel PRO Installation CD into the CD-ROM drive.
Note: If you encounter a dialog box that says you must have .NET Framework, follow the instructions in the box.
2. If the CD does not automatically run, go to **START >> MY COMPUTER** and double-click on the DLP icon.
3. A “Found New Hardware” dialog box may appear. If so, select **“No, not at this time.”**
4. Click **“Install”** in the Install Driver section of the installation screen.
5. Accept the default installation directory as “C:\DL Pro” and click **“Next.”**
6. Click **“OK”** to run the “Add Printer Wizard.”
7. In the initial screen, click **“Next.”**
8. Select **“Local printer attached to this computer”** and click **“Next.”**
9. Select the port you wish to use and click **“Next.”** (Default location is LPT1.)
10. From the printers list, select **“Graphic Products DuraLabel PRO”** and click **“Next.”**
11. If given a choice to keep or replace the existing driver, select **“Replace existing driver”** and click **“Next.”**
12. Leave the default name as “Graphic Products DuraLabel PRO” and select **“Do not share this printer”** (this can be changed later) and click **“Next.”**
13. Answer **“No”** to “Do you want to print a test page” and click **“Next.”**
14. Click **“Finish”** on the last screen, “Completing the Add Printer Wizard.”



5. SET UP TO PRINT

When printing labels it is easier to start with an existing template and make modifications than to create a new label from scratch. On the CD splash screen click on "Install Templates & Symbols."

****IMPORTANT****

Perform these changes before opening the document you wish to print.

Continuous Label Stock

The Default Printing Preferences on your DuraLabel PRO should be at the proper settings for printing on continuous vinyl and should require no adjustments.

To change settings:

1. Select **START >> PRINTERS and FAXES**.
2. Right-click on "DuraLabel PRO" and select "**Printing Preferences**."
3. On the Options tab you can adjust the speed and darkness to optimize print quality depending on the ribbon and tape supply you are using.



Die-Cut Label Stock (Arc Flash & RTK/NFPA)

 
When printing on die-cut labels you will need to calibrate the gap sensor and make some adjustments in the print driver.

To calibrate the gap sensor:

1. Turn off the printer and wait 5 seconds.
2. Hold down the button on top of the printer and turn it back on. The light will change colors then blink red 5 times.
3. Release the button while it's blinking red. Labels will feed through the printer and the gap sensor will be calibrated.

To set up the driver for die-cut label stock:

1. Select **START >> PRINTERS and FAXES**.
2. Right-click on "DuraLabel PRO" and select "**Printing Preferences**."
3. On the Stock tab under "Media Settings" change the Type to "**Labels with Gaps**." (If you do not want to cut between every label, under Media Handling change the Post-Print Action to "None." Or you can leave the cutter on but specify an interval.)
4. Click "**Apply**" after you have made your changes.

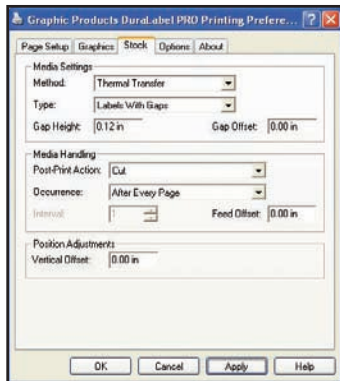



1-800-788-5572

P.O. Box 4030
Beaverton, OR 97076

www.DuraLabel.com

© 2008, 2009, Graphic Products, Inc. All Rights Reserved

v. 1.2 - 8/11/09